


How to replace the spinning head (SKU 19000220) ?

Identification of problem: If the device malfunction indicates a damaged head, it should be replaced. Repair in the service is not necessary if customer want to proceed with self replacement of spinning head.

Please follow the attached manual.


Solution:

STEP 1: Unscrew the cover of spinning head – attached with 6 screws

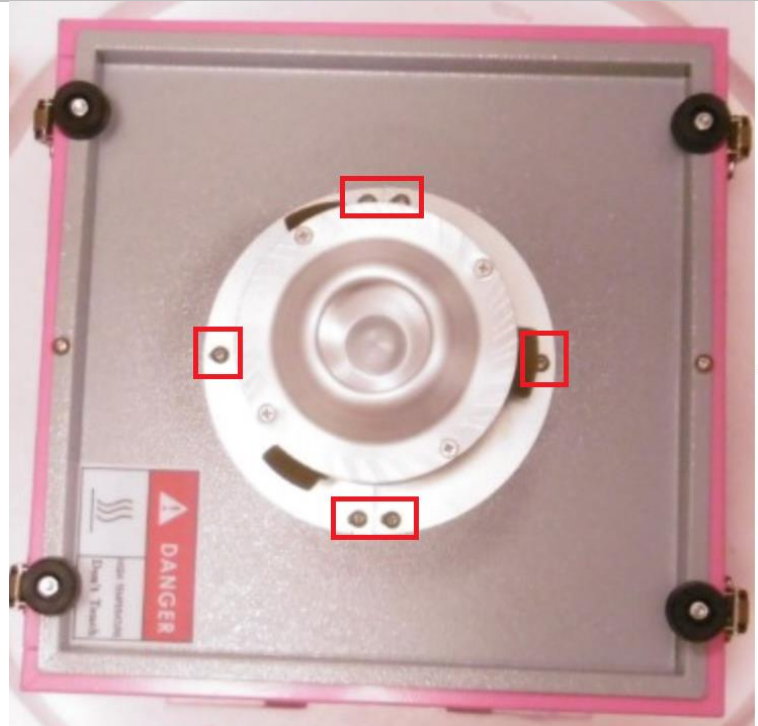

STEP 2: Unscrew 1 bolt which is located behind the cover - on the moving element (the spindle)
*Marked as number '2' on photo below

STEP 3: Disconnect the two cables connected to the head
*Marked as number '3' on photo below

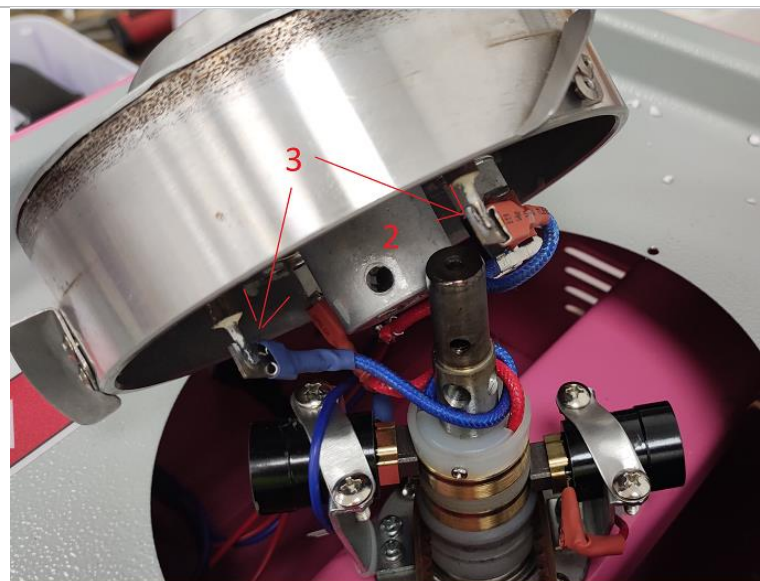

STEP 4: Take out the head.

STEP 5: Reverse to steps 3,2,1 install new head.